


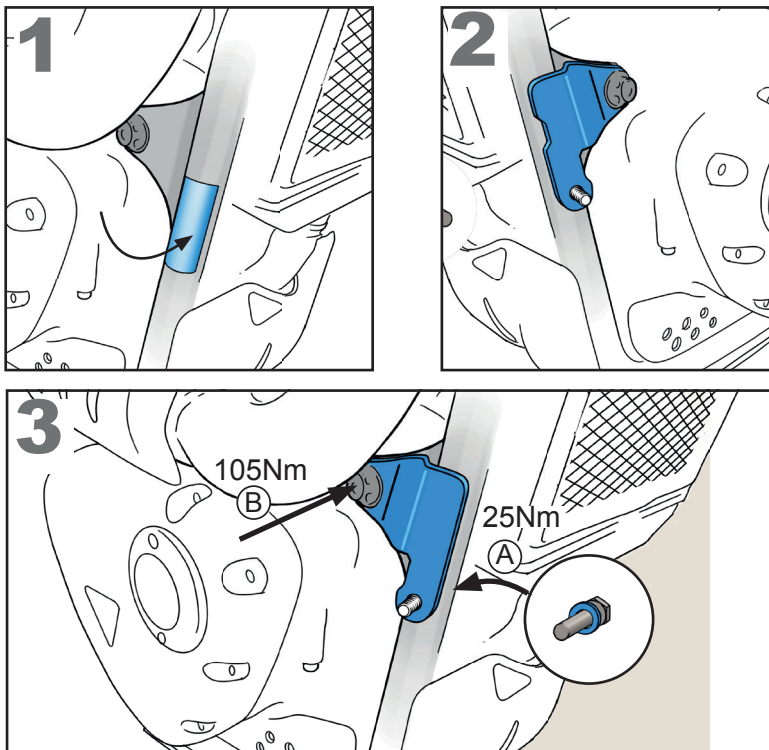

In the models from 2021

1. Fit the transparent protection sticker as indicated (left and right side)

2. The left side bracket has a small cutout. Install as explained in the following steps.

3. Insert the hexagon head screw from the back in A with one of the washers. Now fit the bracket as indicated in the drawing and fix using the original screw in B. Do not tighten.

Now fit the kit as indicated in the main instructions.

Fix the screw A using the washer and locknut.

Finally fix the big screw in B.

Nei modelli dal 2021

1. Montare l'adesivo di protezione trasparente come indicato (lato sinistro e destro)


2. La staffa laterale sinistra ha un piccolo ritaglio. Installare come spiegato nei passaggi seguenti.

3. Inserire la vite a testa esagonale dal retro in A con una delle rondelle. Montare ora la staffa come indicato nel disegno e fissarla con la vite originale in B. Non serrare.

Montare ora il kit come indicato nelle istruzioni principali.

Fissare la vite A utilizzando la rondella e il controdado.

Infine stringere la vite grande B.

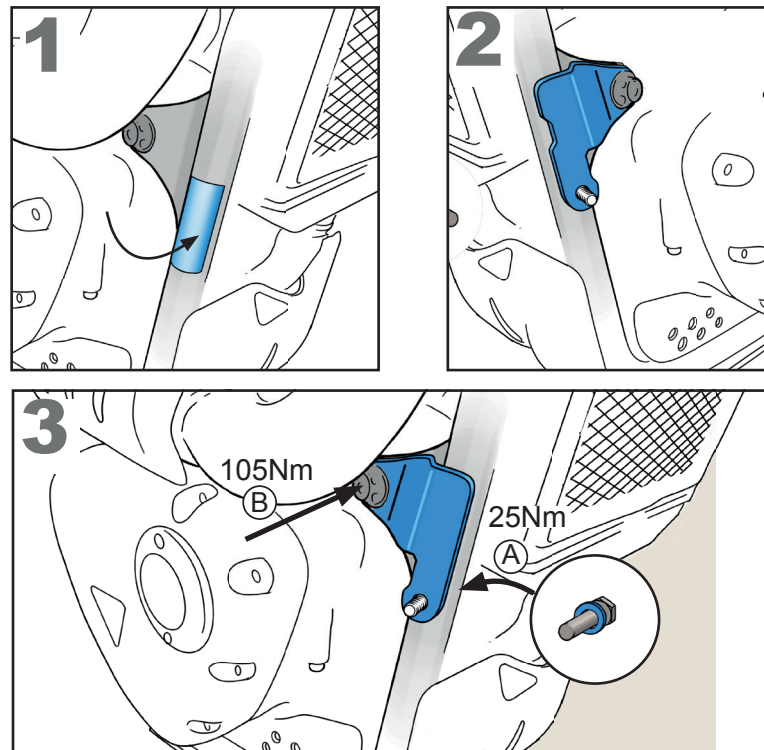

In the models from 2021

1. Fit the transparent protection sticker as indicated (left and right side)

2. The left side bracket has a small cutout. Install as explained in the following steps.

3. Insert the hexagon head screw from the back in A with one of the washers. Now fit the bracket as indicated in the drawing and fix using the original screw in B. Do not tighten.

Now fit the kit as indicated in the main instructions.

Fix the screw A using the washer and locknut.

Finally fix the big screw in B.

Nei modelli dal 2021

1. Montare l'adesivo di protezione trasparente come indicato (lato sinistro e destro)

2. La staffa laterale sinistra ha un piccolo ritaglio. Installare come spiegato nei passaggi seguenti.

3. Inserire la vite a testa esagonale dal retro in A con una delle rondelle. Montare ora la staffa come indicato nel disegno e fissarla con la vite originale in B. Non serrare.

Montare ora il kit come indicato nelle istruzioni principali.

Fissare la vite A utilizzando la rondella e il controdado.

Infine stringere la vite grande B.